


## Installation Instructions for Kewlmetal Mini Floorboards.

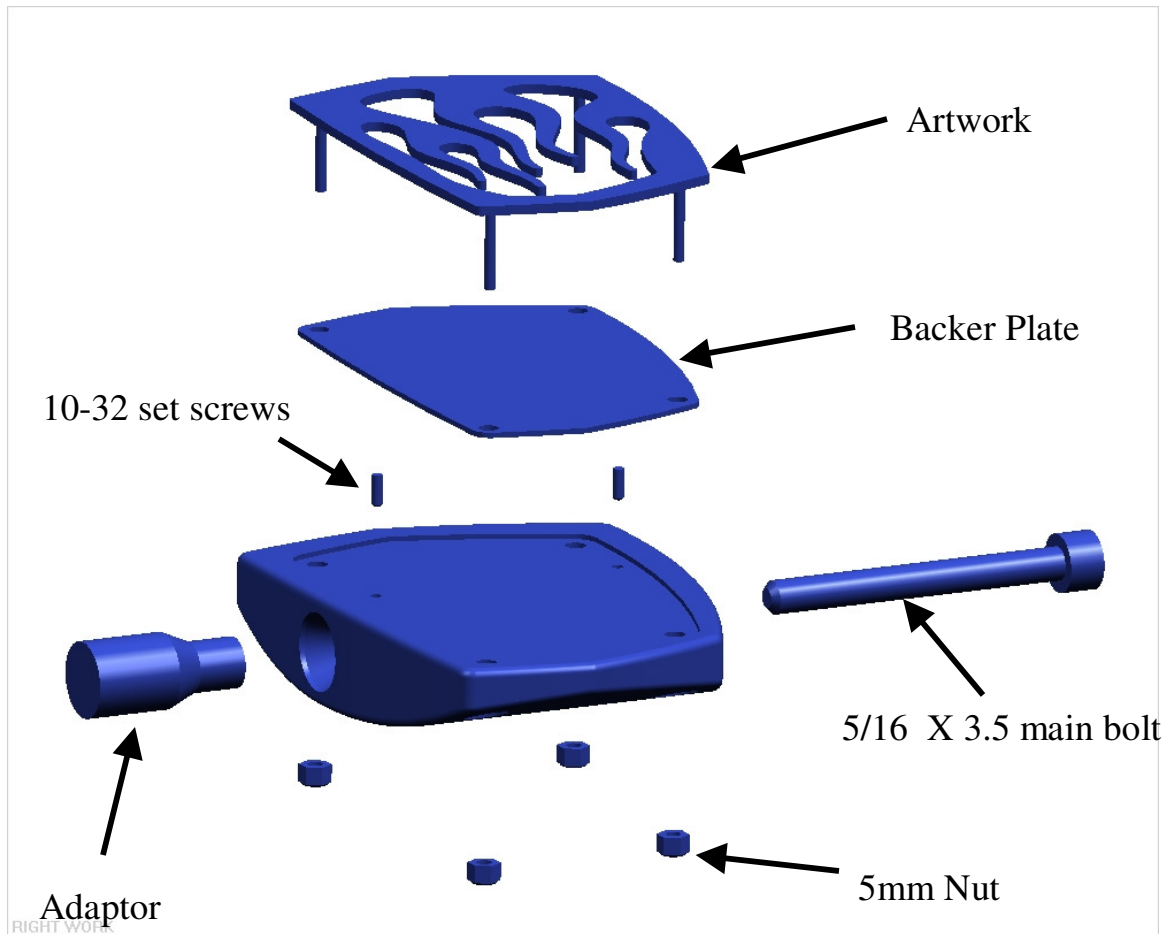

You will need to assemble and final tighten everything on your new mini floorboards. Some pieces may come pre-assembled, but they are NOT final tightened. There are several adaptors available depending on your application, please see our website for the the various fitments. Once your adaptor is mounted to your bike, slide the mini floorboard on the adaptor, and install the 3½ inch long main bolt. Now sit on your bike and rotate the mini floorboards to the desired angle. Now tighten the main bolt to 18-ft lbs of torque. Then snug down the 10-32 set screws to lock the assembly. Lastly, install the colored backer plate and the artwork, and install the 4 5mm nuts from underneath.

You will probably want to remove the artwork every so often just to clean the artwork and backer plate.